



PWS Load Safety Indicator

Do your drivers know when they are reaching their load limit?

By using our NEXUS Fork Lift Truck Scale and the PWS Load Safety Indicator, we can alert your driver when they are reaching their limit.

3 parameters can be set depending on the trucks rating, and can be adjusted according to specific client requirements.



Figure 1 - IP68 Steel Enclosure



The Colour of the backlight, in the tolerance control function, automatically changes depending on the weight.

- Prevent tipping incidents
- Where to load information (top or bottom deck)
- Accurate weight data can be streamed anywhere

Knowing the weight of your load is paramount to the safety of your fork lift drivers and others in the area.

Positive Weighing Solutions, Unit 8 The Clifton Centre, Spring Lane South, Malvern, WR14 1BJ

Call us on **01684 561 002** or email us at **info@positiveweighing.co.uk**